
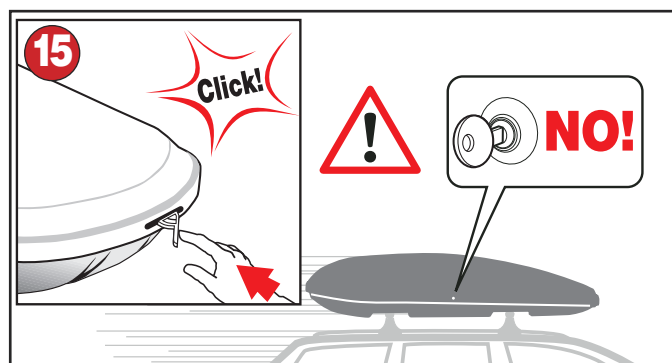
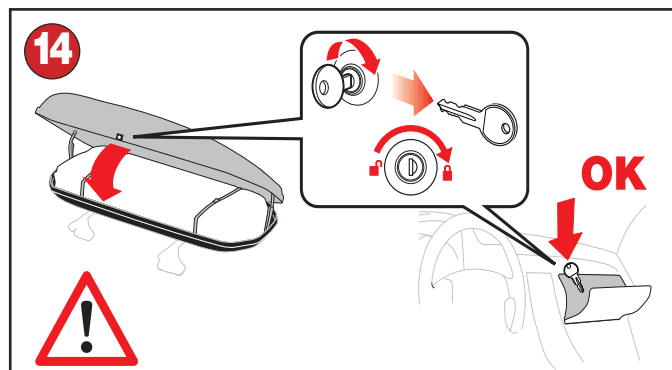
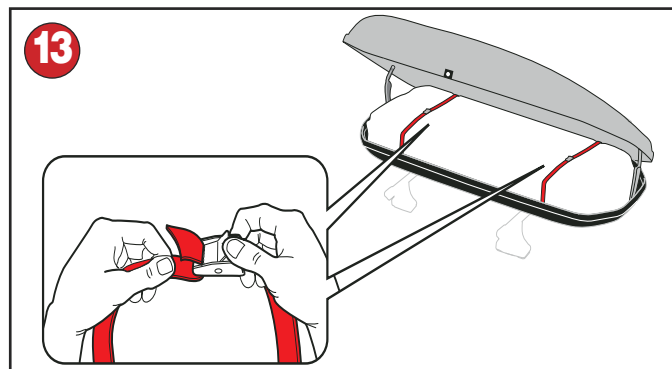
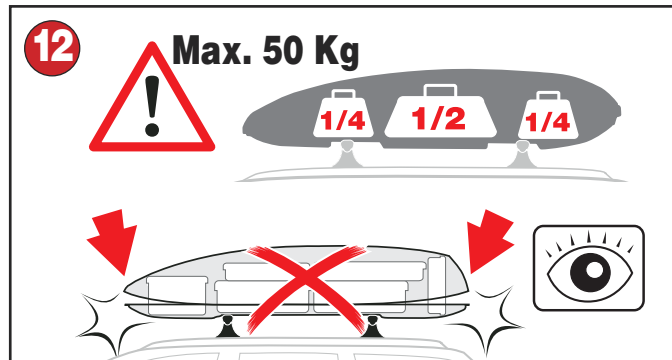
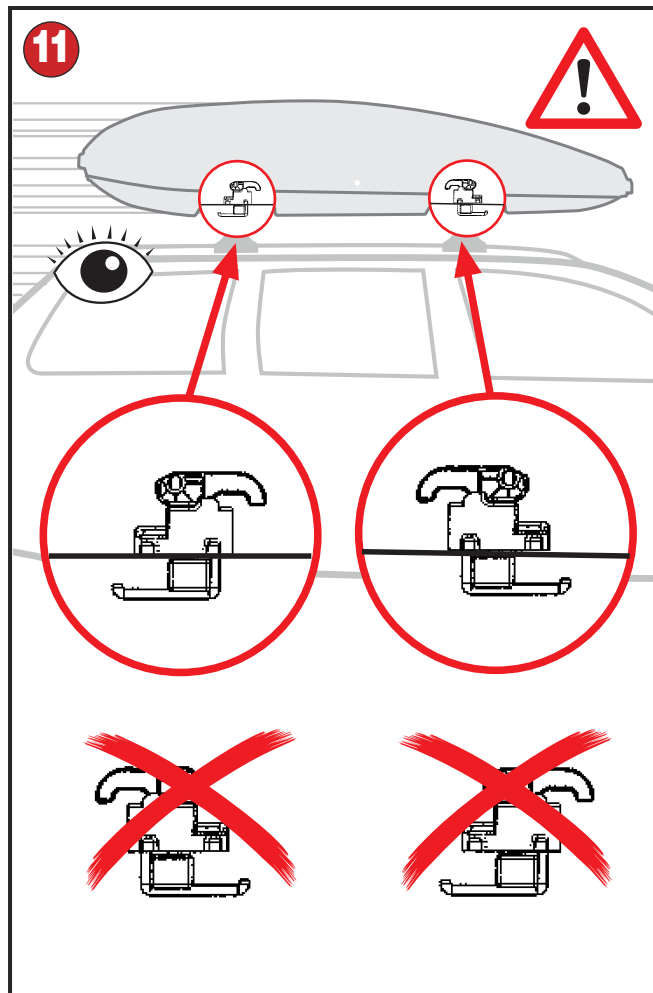


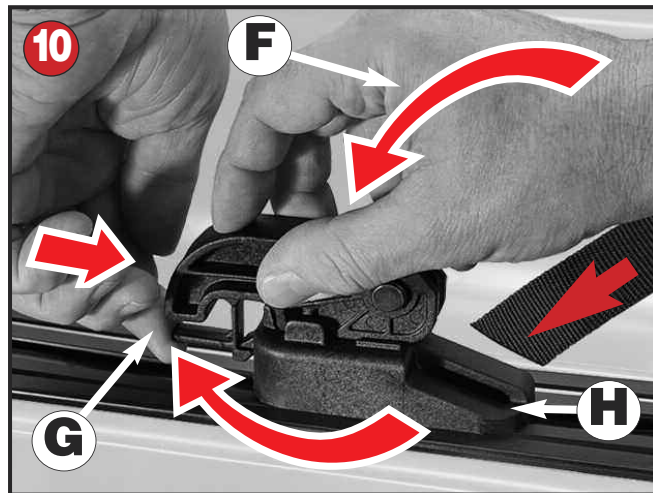

Fitting instructions ROOF BOX	Notice de montage COFFRE DE TOIT	Montageanleitung DACHBOX
Istruzioni di montaggio BOX DA TETTO	Instrucciones de montaje COFRE DE TECHO	Montagevoorschriften DAKKOFFER

Model - Modèle - Modell - Modello - Modelo - Model

Xtreme - XT 2

DIN 75302 1991-02





CityXCrash

Attestation of Conformity
N.VA-MES 13 07 010
ISO/PAS 11154:2006
Resistance to City Crash



BAUART
GEPRÜFT
TYPE
APPROVED

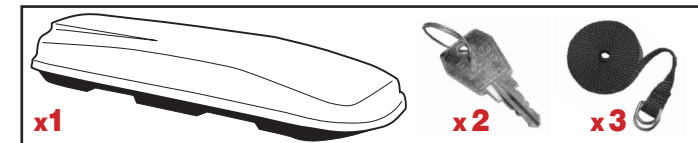

Only for disassembled models	Uniquement pour les modèles démontés	Nur für demonterte Modellen
Solo per modelli smontati	Sólo para los modelos desmontados	Aleen voor gedemonteerde models

